


INSTRUCTIONS

BF1225-4DR FOLDING DOOR HARDWARE

For 1-3/8" (35mm) to 1-3/4" (45mm) Panels weighing up to 75 lbs. (22.5 kgs) each. 2/0 (609mm) X 9/0 (2741mm) Maximum Panel Size.





MAXIMUM: 6 PANELS ONE WAY
PREPARE OPENING CAREFULLY: MAKE SURE CORNERS ARE SQUARE,
HEADER IS LEVEL AND JAMBS ARE STRAIGHT

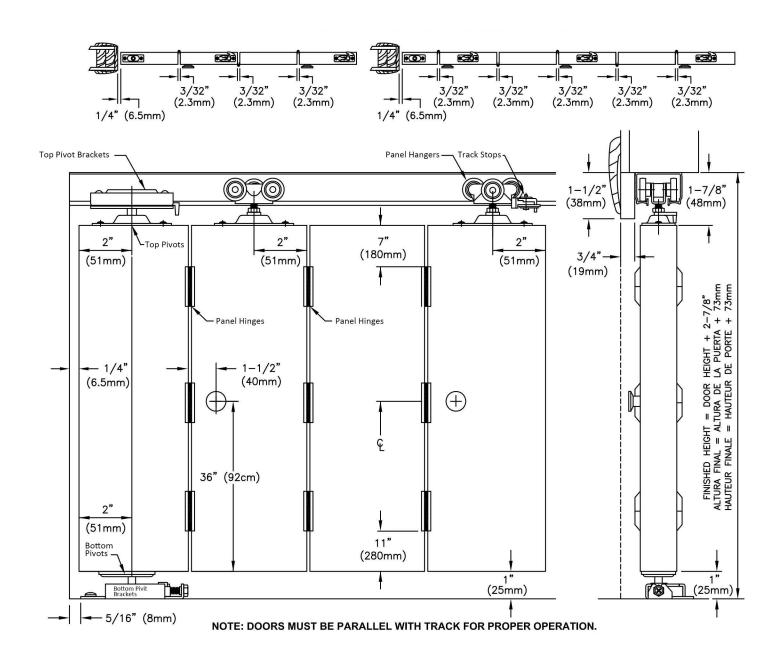


TRACK TO LENGTH. Insert parts in track and fasten to center of header with 1-1/4" (32mm) pan head screws.

 
NOTE: Alternate wheels for even weight distribution (1-2-1-2 etc.)



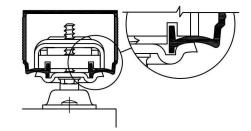



HINGES(Panel Hinges) Should be located 7" (178mm) from top and 11" (280mm) from bottom, center middle hinge. Hinge half with pin should be on side of each panel furthest from jamb with pin pointed up and on alternate sides of doors.

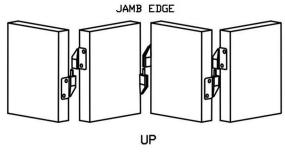


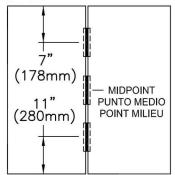


MARK a line 1/2" (13mm) from jamb side door edge along top of all doors (or on centerline). Mount Top Pivot on jamb door and Hanger Door Plate 1121 on other doors (see diagram). Bottom Pivot is located 5/8" (16mm) from edge of jamb door 2" (50mm) to center of Pivot. NOTE: Locking Latch must open toward rear of opening.

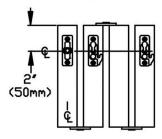


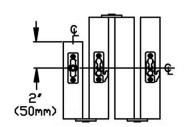


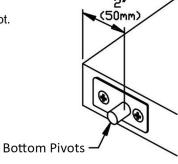


   FASTEN BOTTOM PIVIT BRACKETS FLOOR BRACKET to floor 5/16"(8mm) from jamb face and centered under track. Remove floor bracket. Hang pivot door by inserting top pivots into top pivot brackets. Lock into place with locking lever. Tilt door slightly to allow bottom pivit brackets to slide under bottom pivots. Insert bottom pivots into hole of bottom pivit brackets. Reattach floor bracket.








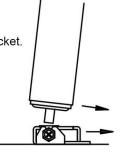


 F HANG doors by dropping door over hinge in preceding panel. Clip hangers in place.



ADJUST SNUBBER TRACK STOPS.Close doors, slide track stops until it touches panel Hangers. move track stops 1/8" (3mm) closer to panel hangers and tighten.

T ATTACH KNOB. Drill 3/16" (5mm) hole, 36" (920mm) from bottom of door, 1-1/2" (38mm) from hinge edge of 2nd door as shown, or in a location to suit design of door.

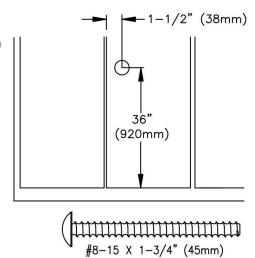

ALIGNERS (4 DOORS ONLY) are located on back side of lead doors, 6" (150mm) from bottom. (Note: under certain conditions, aligner may hit opposite door when closing. If this occurs bend arm of aligner until sufficient clearance is obtained.

