



INSTRUCTION

BPK1100 SERIES


SLIDING DOOR HARDWARE

Minimum Door Thickness 3/4" (19mm)


Maximum Door Weight 150lbs. (68kg).





2 Door : 2X Door width -1" (25mm)




3 Door : 3X Door width -2" (50mm)




4 Door : 4X Door width -2" (50mm)




BPK1100/4DR Kit sold separately

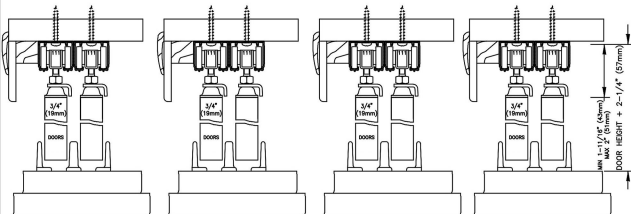


- 1 MOUNT TRACK TO HEADER:** Cut track to fit opening, insert **1125 Hangers** and **BPK1114 Stops** into track and mount to header with 1-1/4" (32mm) pan head screws.

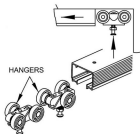


- 2 MOUNT HANGER PLATES TO DOOR:** Fasten Door Plates to top of 2" (50mm) from each edge, on center line of door.

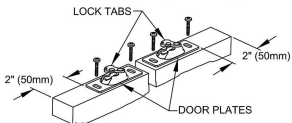


- 3 DRILL HOLES AND INSTALL PULLS:** (2-1/8" (54mm) dia.) Pulls are furnished as standard. Bore 2-1/8" (54mm) hole through front of panel, snap pull into place. (if hole is a bit too large for a snug fit, wrap tape around rear of pull to enlarge.)

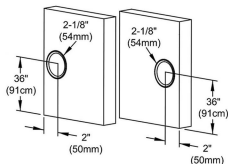


- 4 HANG DOORS:** Insert Door Plate's pivot pin into **1125 Hanger**. Lock into place with locking lever.



- 5 ATTACH DOOR GUIDE:** Move both doors to one side of jamb. Place Door Guides between doors and align doors with jamb. Attach door guides to floor with 3/4" (19mm) screw. Push doors to opposite jamb and put 3/4" (19mm) screw in other end of guides.

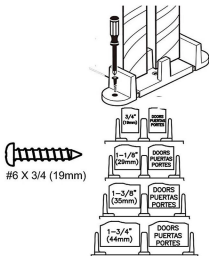


- 6 ADJUST HANGERS,** if necessary, to plumb doors with jambs.

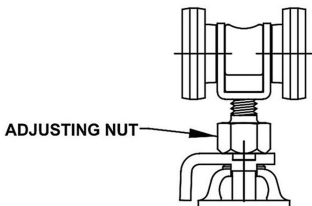

7 INSTALL Angle Stop: Attach **Angle** Stop on rear of front door 1 - 1/2" (38mm) from jamb edge, 1/2" (13mm) from top (hollow core) or 40" (1m) from bottom (Solid core doors).

Note: if other than the provided pull is used, adjust location of stop to allow for access to rear door pull.



**** SKIP For 2 Door Applications ****

8 3 AND 4 DOOR BPK1114 STOP: (3 door opening) Attach the Stop on rear track to the right of the center door, (4 door opening) Attach the 1155 Stops to the rear track in the center of the opening.

